 


Fire Related Product Recall Notice

 


Date issued: 12 December 2012

Bosch dishwasher - multiple models manufactured between 2000 and 2006

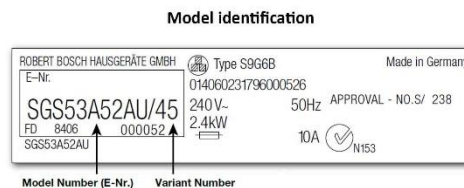

Model identification location

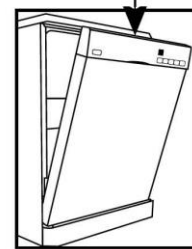

Problem

Cracks may develop in the circuit board within the control module that may lead to melting of on the board or, in an unlikely event, a fire in the dishwasher.

Details

Affected model numbers:

SGI4335AU, SGI4345AU, SGI4347AU, SGI43A25AU, SGI43A45AU, SGI43A55AU, SGI4705AU, SGI4715AU, SGI53A55AU, SGS4332AU, SGS4352AU, SGS43A92AU, SGS43B22AU, SGS43B42AU, SGS4702AU, SGS4712AU, SGS5332AU, SGS53A52AU, SRI43A05AU, SRS5302AU

What to do

Customers with affected products cease using their dishwasher immediately and switch it off at the socket outlet.

Contact Bosch by phone or the online to arrange for the free in-home repair.

Contact

BSH Home Appliances Ltd

tel: 0800 886 551

<http://www.boschpromotions.co.nz/dishwasher-repair/>

This notification has been compiled using information from external sources for the promotion of fire safety. Although care has been taken in preparing the information published, Fire and Emergency New Zealand does not guarantee the accuracy of it. Fire and Emergency New Zealand is not responsible for any errors or omissions and accepts no liability whatsoever for any loss or damage howsoever arising.